


# Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

## 3. Electrical Component Location

### A: LOCATION





#### 1. ENGINE COMPARTMENT

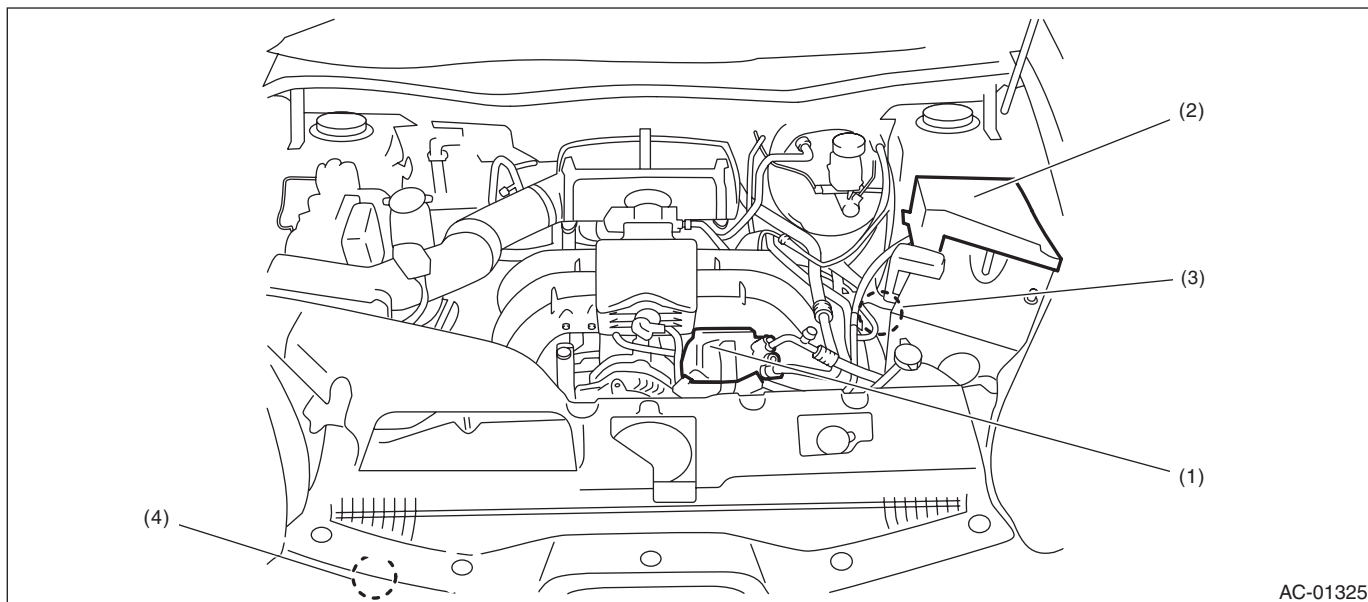

- (1) A/C compressor  
(2) A/C relay

- (3) Pressure switch


- (4) Ambient sensor

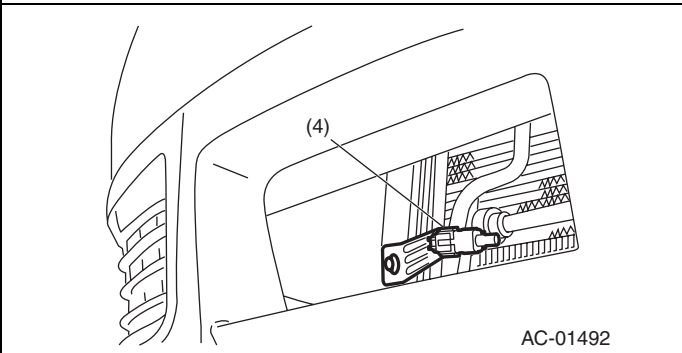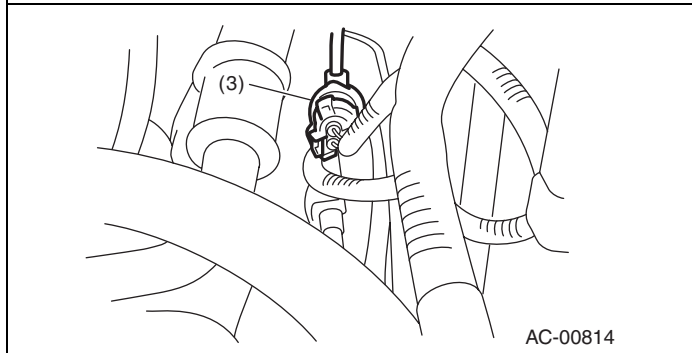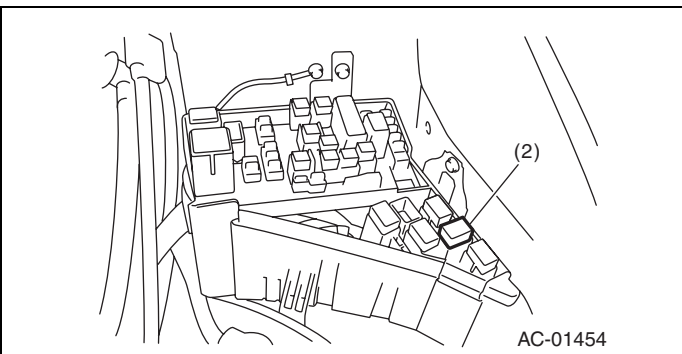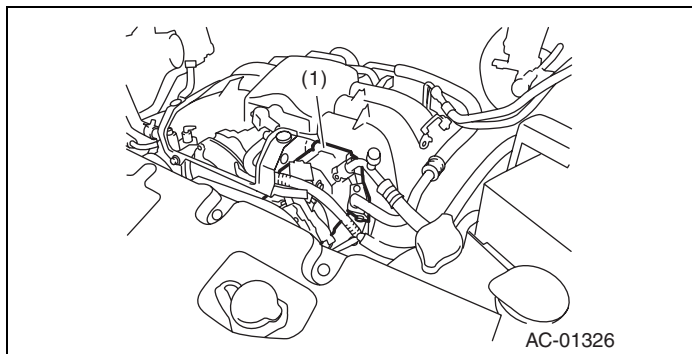

# Electrical Component Location


HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

## 2. PASSENGER COMPARTMENT

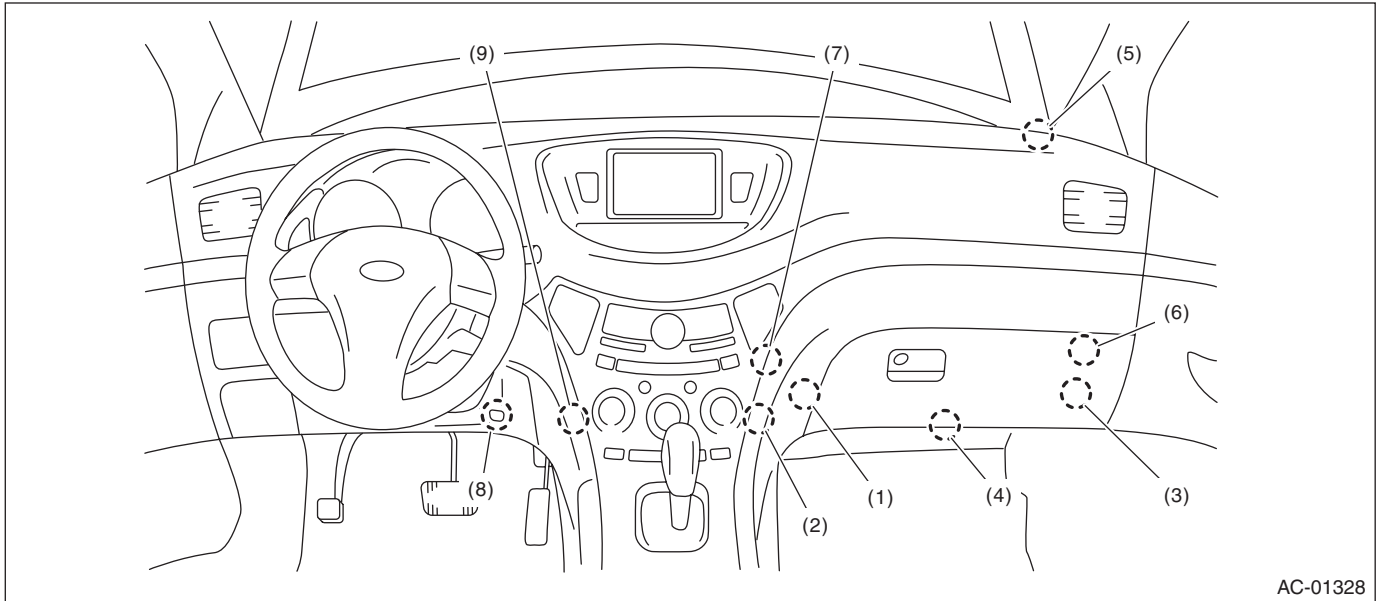


AC-01328


- |  |                          |   |
|--|--------------------------|---|
| (1) Evaporator sensor                      | (4) Blower motor         | (7) Mode door actuator                  |
| (2) Passenger's side air mix door actuator | (5) Sunload sensor       | (8) In-vehicle sensor                   |
| (3) Auto A/C control module                | (6) Intake door actuator | (9) Driver's side air mix door actuator |

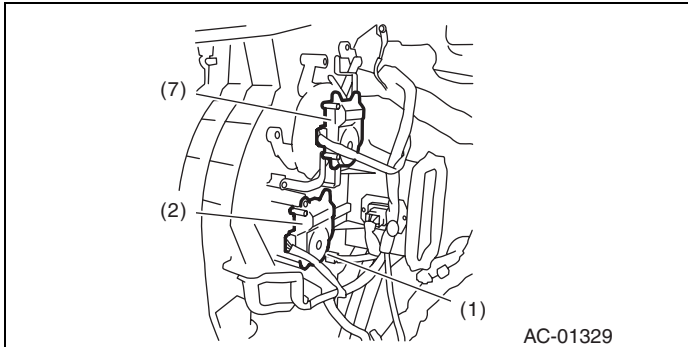


AC-01329

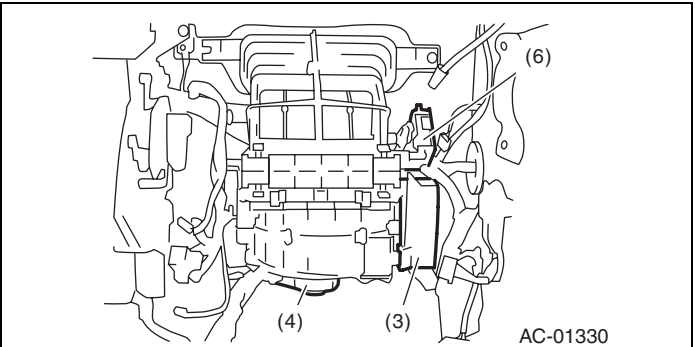

AC-01330

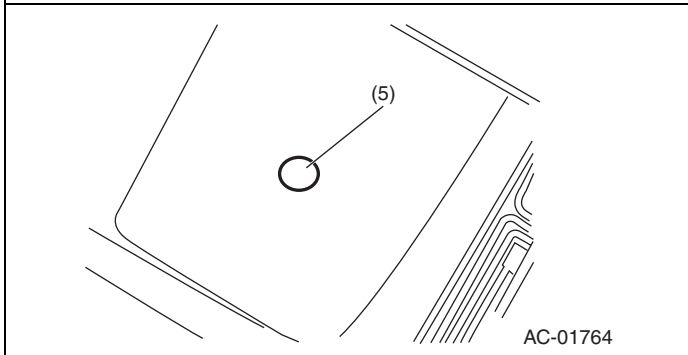

AC-01764

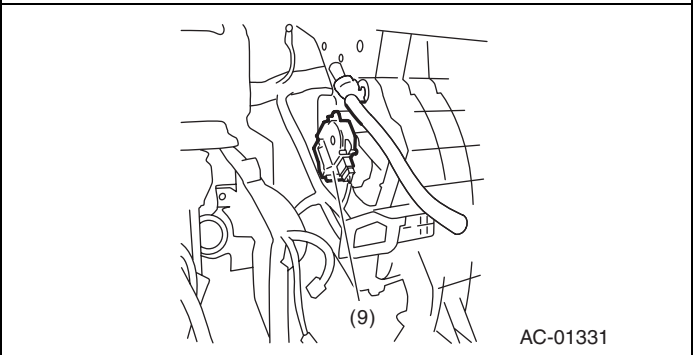

AC-01331